


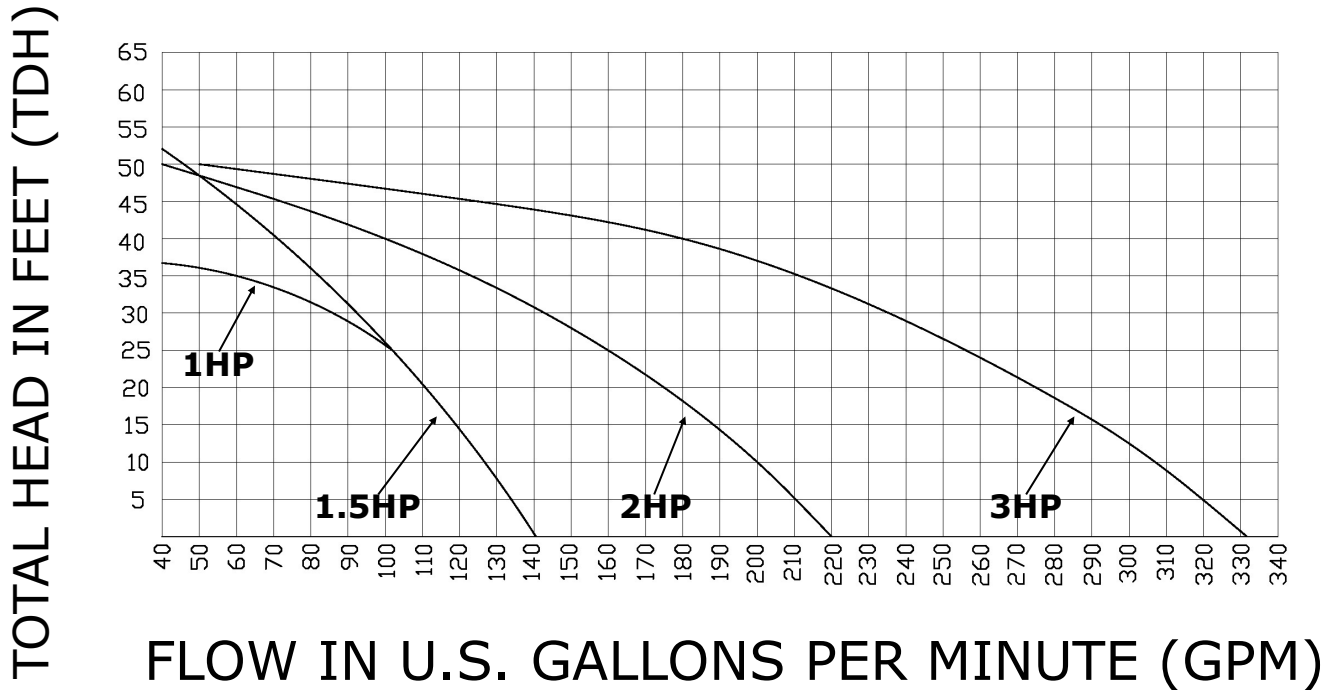

CP04 TURBINE PUMP CURVES



PLOT YOUR POINT: Follow the flow in U.S. gallons per minute required horizontally on the chart to your GPM flow required; then follow up to your total head in feet required.

The location of the point plotted on the chart determines the horsepower of pump required.

PLEASE NOTE: *There is no warranty on horizontal pumps.*