


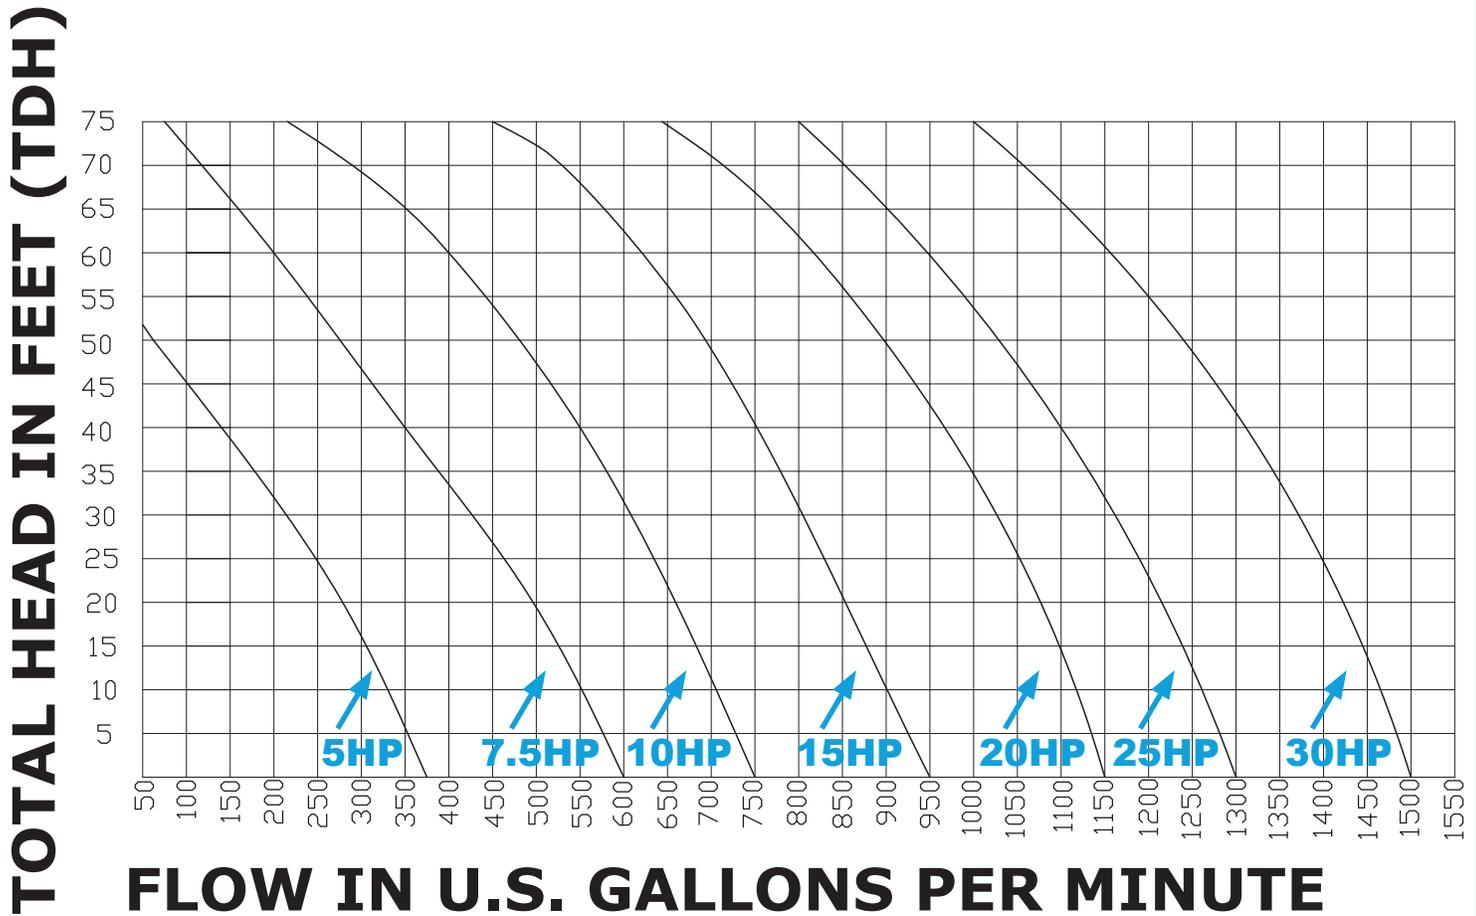

CP06 SERIES TURBINE PUMP PERFORMANCE CURVES



PLOT YOUR POINT

Follow the flow in U.S. Gallons Per Minute (GPM) required horizontally on the chart to your GPM flow rate required; then follow the chart up to your total head in feet required.

The location of the point plotted on the chart determines the horsepower of pump required.

PLEASE NOTE: *There is no warranty on horizontal pumps.*